

Wilo - Jet WJ



Fig. 1

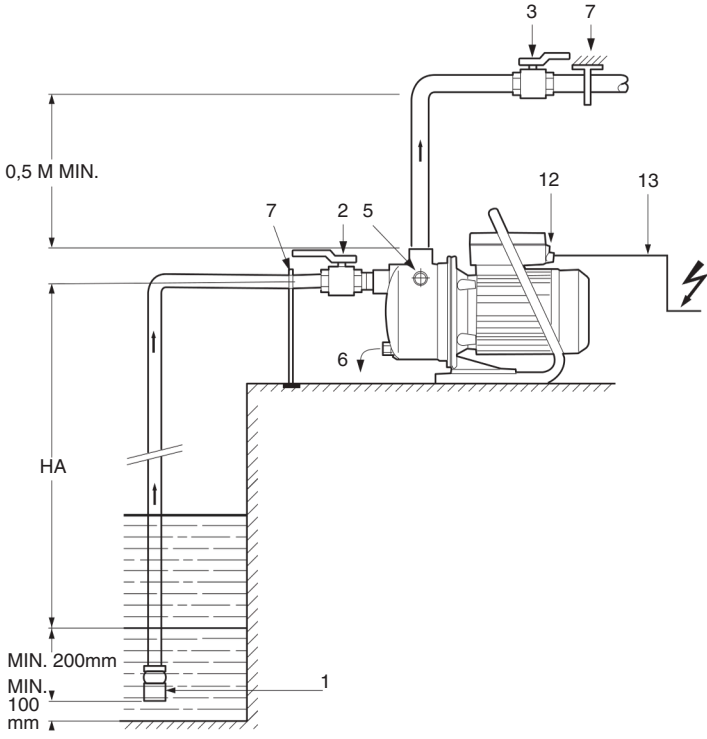


Fig. 2




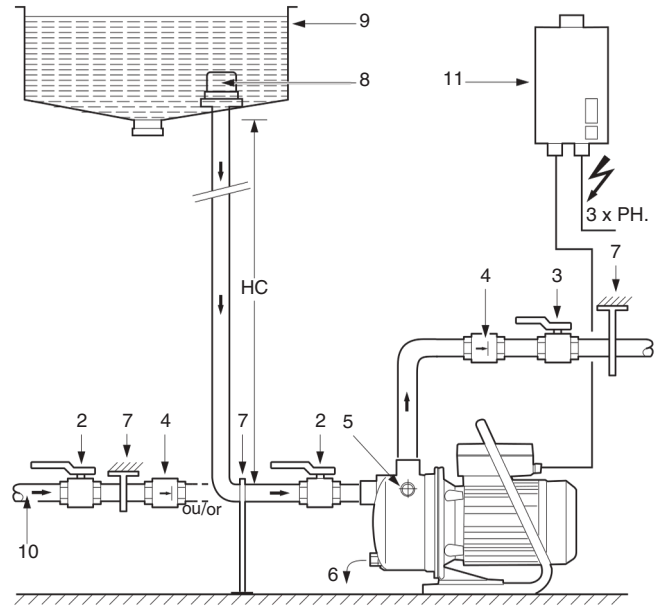


Fig. 3

3~
230 - 400 V
220 - 280 V / 240 - 415 V

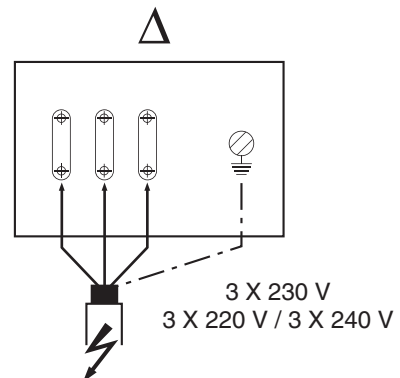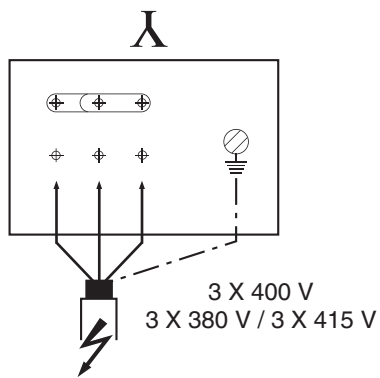

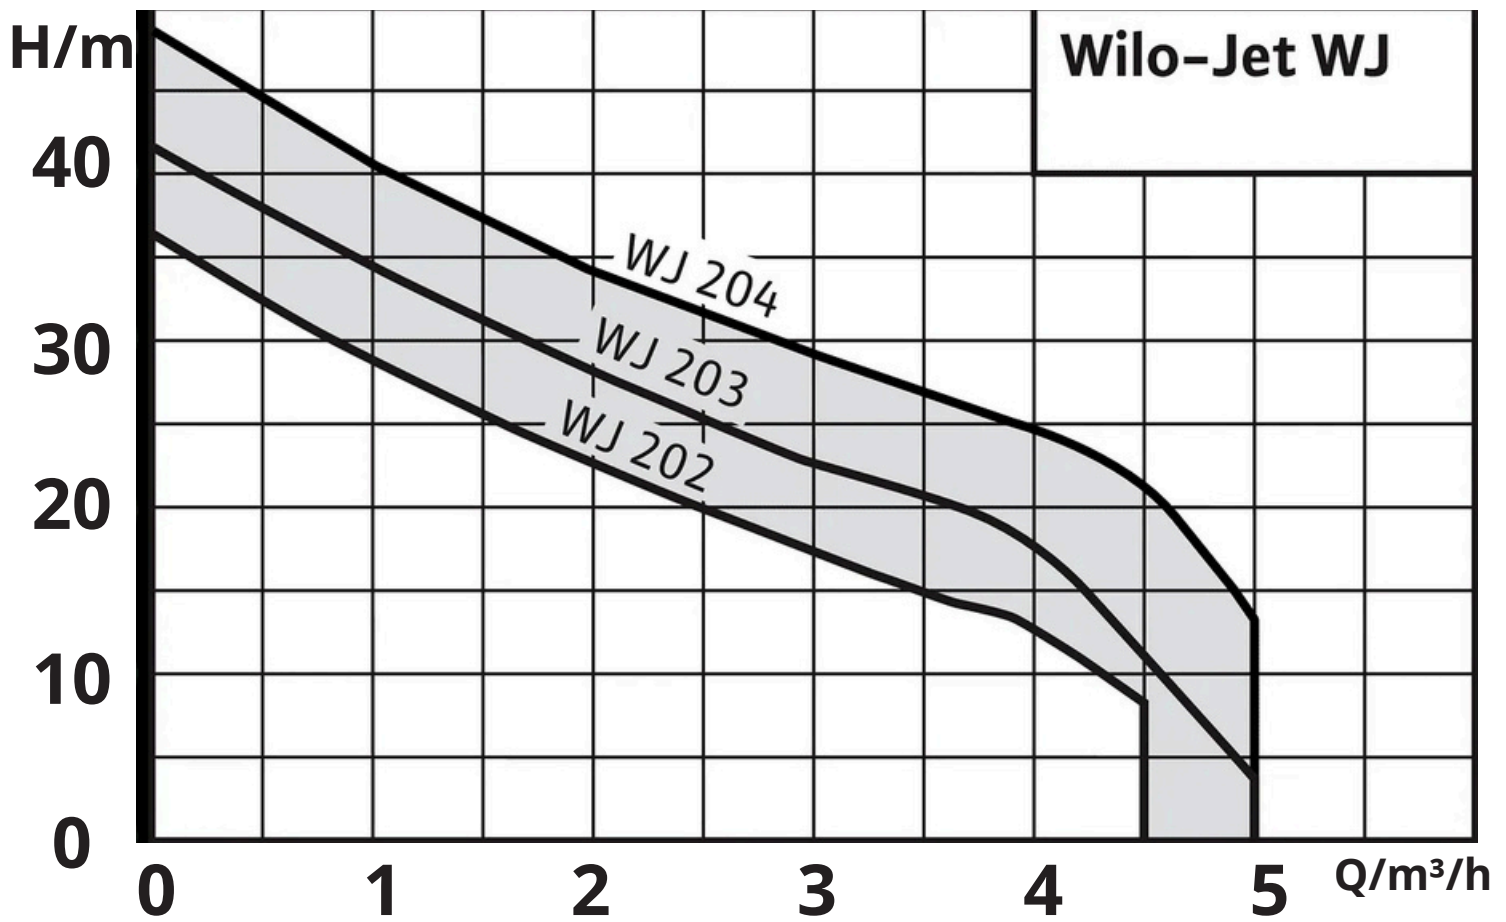

de	Einbau- und Betriebsanleitung	18
en	Installation and operating instructions	22
fr	Notice de montage et de mise en service	26
nl	Inbouw- en bedieningsvoorschriften	30
es	Instrucciones de instalación y funcionamiento	34
it	Istruzioni di montaggio, uso e manutenzione	38
cs	Návod k montáži a obsluze	42
ru		46
el	Οδηγίες εγκατάστασης και λειτουργίας	51
tr	Montaj ve kullanma kılavuzu Montaj ve	56
bg	kullanma kılavuzu	60

wilo

